

# Contents

---

|                                                                   |    |
|-------------------------------------------------------------------|----|
| ◆ <b>PREPARATION</b>                                              |    |
| ■ Safety Precautions .....                                        | 3  |
| ■ Name of Each Part .....                                         | 8  |
| ■ Remote Control – Buttons and Display .....                      | 10 |
| ■ Inserting the Remote Control Batteries .....                    | 10 |
| ■ Getting Started .....                                           | 11 |
| ◆ <b>OPERATION</b>                                                |    |
| ■ Selecting Auto Mode .....                                       | 12 |
| ■ Selecting Cool Mode .....                                       | 13 |
| ■ Selecting Dry Mode .....                                        | 14 |
| ■ Selecting Fan Mode .....                                        | 15 |
| ■ Selecting the Turbo Function .....                              | 16 |
| ■ Selecting the Energy Saving Function .....                      | 17 |
| ■ Selecting Good Morning Mode .....                               | 18 |
| ■ Adjusting the Airflow Direction .....                           | 20 |
| ■ Selecting Auto Cleaning Function .....                          | 21 |
| ■ Setting the On Timer .....                                      | 22 |
| ■ Setting the Off Timer .....                                     | 23 |
| ■ Operating Your Air Conditioner Without the Remote Control ..... | 24 |
| ◆ <b>RECOMMENDATIONS FOR USE</b>                                  |    |
| ■ Cleaning the Air Filter on Your Air Conditioner .....           | 25 |
| ■ Cleaning Deodorizing and Bio filter (Option) .....              | 25 |
| ■ Temperature and Humidity Ranges .....                           | 26 |
| ■ Operating Recommendations .....                                 | 26 |
| ■ Solving Common Problems .....                                   | 27 |
| ◆ <b>TECHNICAL SPECIFICATIONS</b>                                 |    |

## Safety Precautions

*The following safety precautions are provided to protect the users' safety and prevent property damage. Make sure to read the followings and use the air conditioner properly.*

► Keep this user's manual together with the installation manual in a handy place so that you can find it whenever you need to see it after reading this manual thoroughly.



### WARNING


• This indicates the possibility of serious injury or death.



### CAUTION

• This indicates the possibility of serious injury or damage to environments when operated incorrectly.


#### WHEN INSTALLING

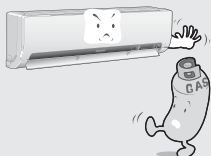

- Do not install the unit in a place where it is exposed to inflammable gas leakage.



- Do not install the outdoor unit where there's the risk of dropping such as on high outer wall or outside of the terrace.

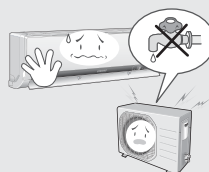

- Do not connect the ground to a gas pipe, water pipe, lightning rod or telephone earth.



- Contact the service center if the air conditioner is under water.



- The installation must be carried out by a licensed installer or qualified personnel when installing the unit for the first time or reinstalling it.

#### REGARDING POWER SOURCE



- Do not pull the electric wire or touch the power plug with the wet hands.



- Do not bend the electric wire by force or weigh down the air conditioner not to be out of order.



- Install the switch and circuit breaker only for air conditioner.



- Use the power source with separate wiring only for air conditioner.



- Use the rated current fuse.



- If the power plug is damaged, replace it by the manufacturer or qualified personnel to avoid the risk.




## WARNING

### DURING OPERATION




- ▶ Do not attempt to repair, move, modify or reinstall the unit on your own. Make sure that these installations are carried out by qualified personnel to avoid electric shock or fire.

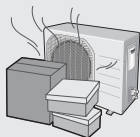


- ▶ Do not place any obstacles in front of the unit. Make sure that the unit is correctly ventilated at all times: Do not place clothing or other materials over it.




- ▶ Do not insert anything between the air outlet blades because the inner fan may be damaged and could cause injury. Keep children away from the unit.

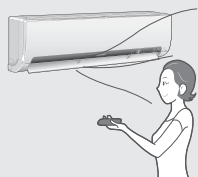

- ▶ When using a wireless remote control, the distance should not be more than 7 meters from the air conditioner. (If applicable)

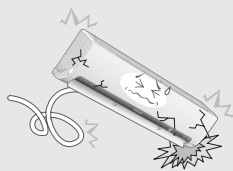


- ▶ The manufacturer declines any liability for damage resulting from modifications or errors in the electrical or hydraulic connections.

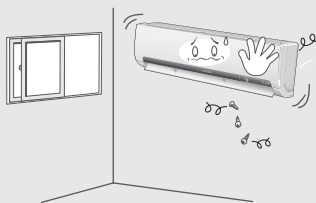


- ▶ Failure to observe the installation instruction, or use of the unit under conditions other than those indicated in the table 'Operating limit' of the unit installation manual, will immediately invalidate the unit warranty.



- ▶ Never spill any kind of liquid into the unit. Should this happen, unplug or main switch off the unit and contact an authorized service center.



- ▶ If the wireless remote control is not used for a long time, remove the batteries. (If applicable)

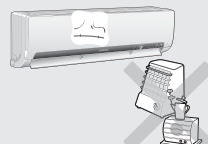

- ▶ Do not connect the electric heater to the air conditioner or repair it with your discretion.




- ▶ Do not place any materials so that children cannot step on it.



## WARNING

### DISPOSING THE UNIT

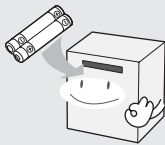

- Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely for recycling reasons.



- When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant may blow out and come into contact with your skin, causing injury. Releasing refrigerant into the atmosphere also damages the environments.




- Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.




## CAUTION


### WHEN INSTALLING

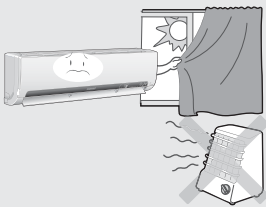

- Install the air conditioner avoiding direct sunlight or heater, especially water.

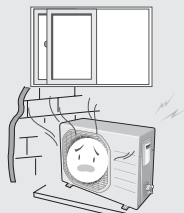

- Install the outdoor unit so as to let the discharged air out properly. Avoid a place that may disturb your neighbor by noise.

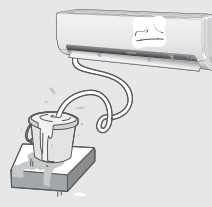

- Install the drain hose to let the water run safely and correctly.



## CAUTION

### REGARDING POWER SOURCE



- ▶ Disconnect the circuit breaker when you don't use the air conditioner for a long time to save energy.




- ▶ Contact the service center or manufacturer if you want to repair the air conditioner.




- ▶ Contact the service center after turning off the air conditioner if strange noise is heard, burning smell or smoke blow.


### DURING OPERATION

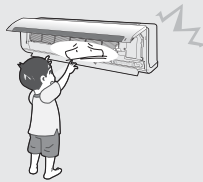


- ▶ Do not open the front grille during operation.

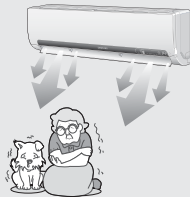

- ▶ Do not use the air conditioner for a long time in a closed room or in a place where there's a baby or an old person.

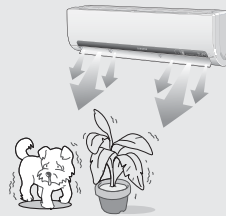

- ▶ Avoid cold and hot air reaching to person, pet or a plant directly for a long time.



- ▶ Do not step on the air conditioner or put heavy object on it.



- ▶ Avoid the water from getting into the air conditioner.




- ▶ Do not drink the water from the air conditioner.



## CAUTION


### DURING OPERATION

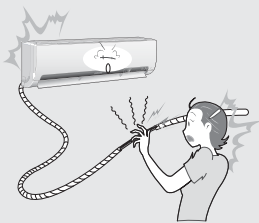

- ▶ Do not touch the pipes connected to the air conditioner.




- ▶ Do not use the air conditioner to maintain the machine, food, pet, plant or cosmetics.



- ▶ Do not give excessive shock to the air conditioner.

### OTHERS

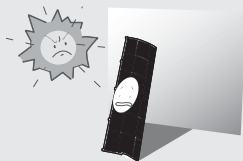


- ▶ Be sure that the air filter not to be exposed to direct sunlight.



- ▶ Turn off the air conditioner and if the fan stops to operate, clean the air conditioner.



- ▶ Clean the air filter every 2 weeks.

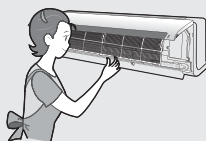


- ▶ Be sure to insert the air filter.



- ▶ The appliance is not intended for use by young children or infirm persons without supervision: Young children should be supervised to ensure that they do not play with the appliance.



- ▶ Do not clean the air conditioner by spraying water directly or with benzene, thinner or alcohol.

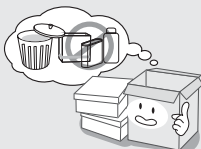


- ▶ Dispose of the packaging material in accordance with the local requirements.



- ▶ The maximum input power & current is measured according to the IEC standard and the input power & current is measured according to the ISO standard.



- ▶ The surface of the heat exchanger is sharp, so be careful of it when cleaning.

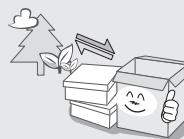


- ▶ All of the manufacturing and packaging materials used for your new appliance are compatible with the environment and can be recycled.

## Name of Each Part


The design and shape can be changed according to the model.

### Indoor Unit

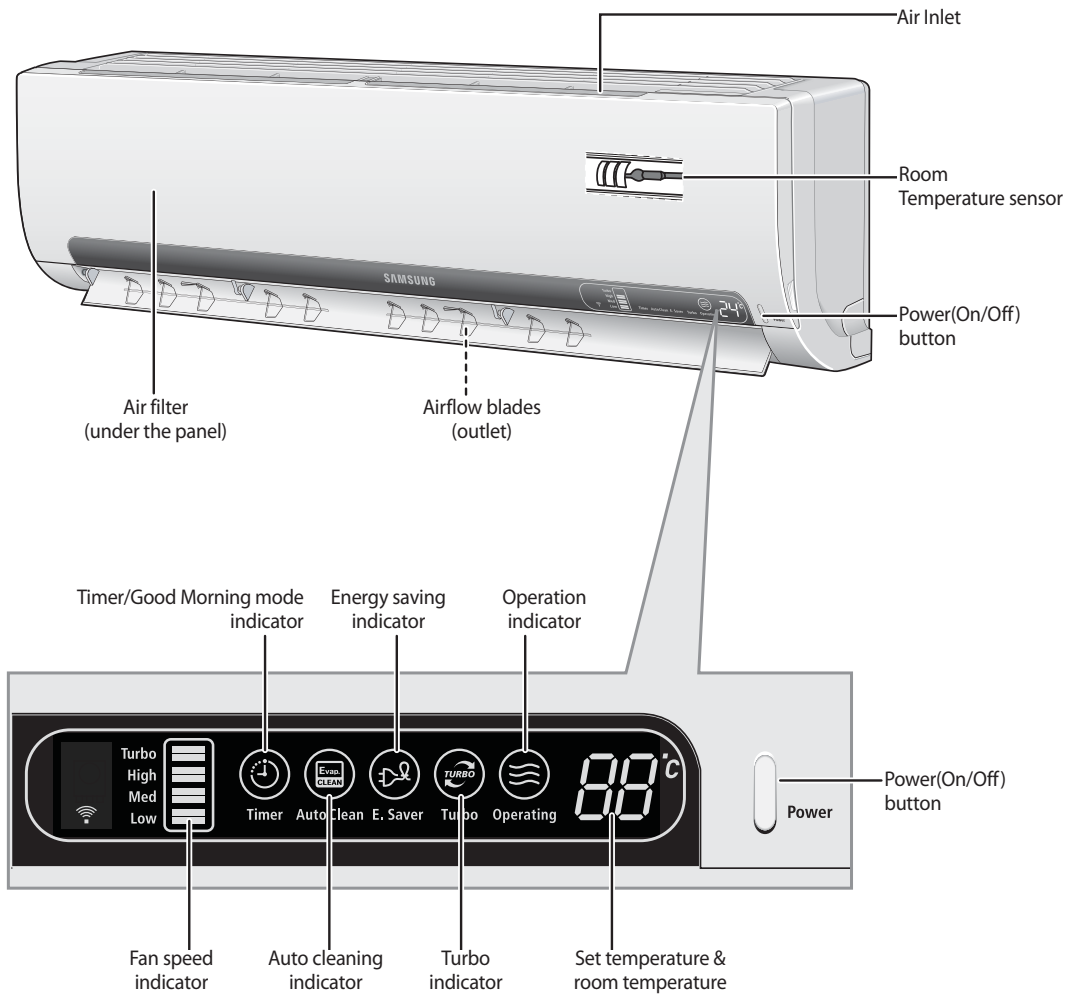


### Outdoor Unit

#### AS09M\*\* Series

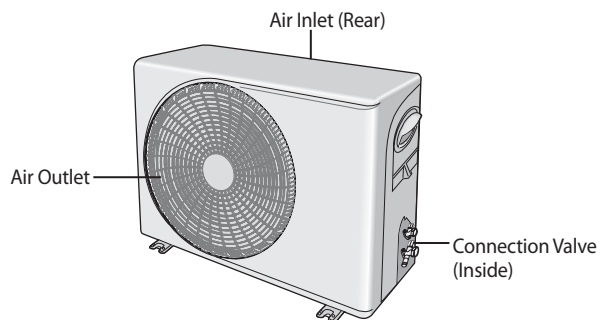


### Outdoor Unit

#### AS12M\*\* Series

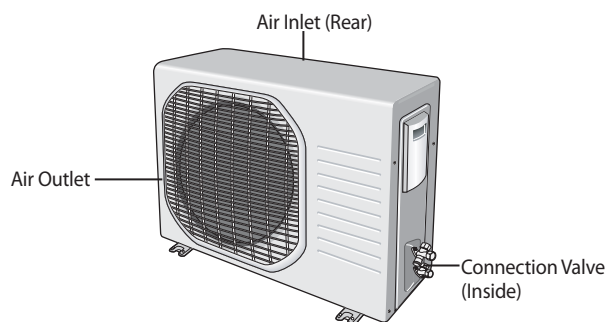


### Outdoor Unit

#### AS18M\*\* Series

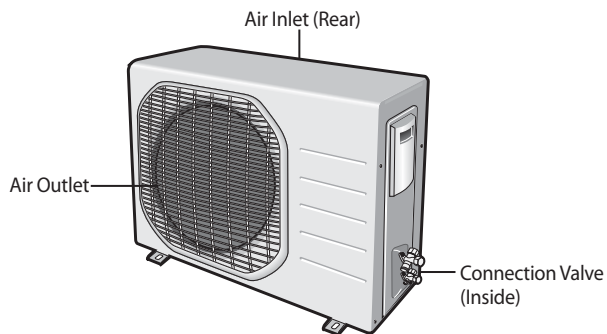


### Outdoor Unit

#### AS24M\*\* Series


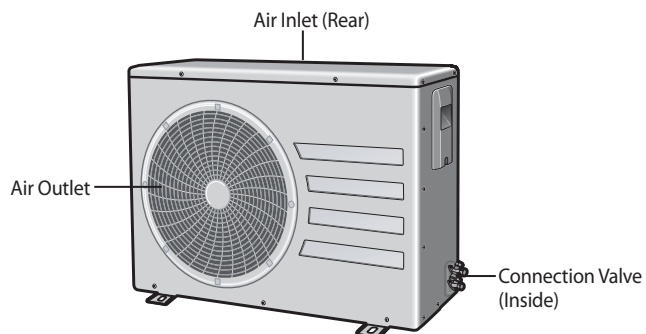


## Remote Control - Buttons and Display

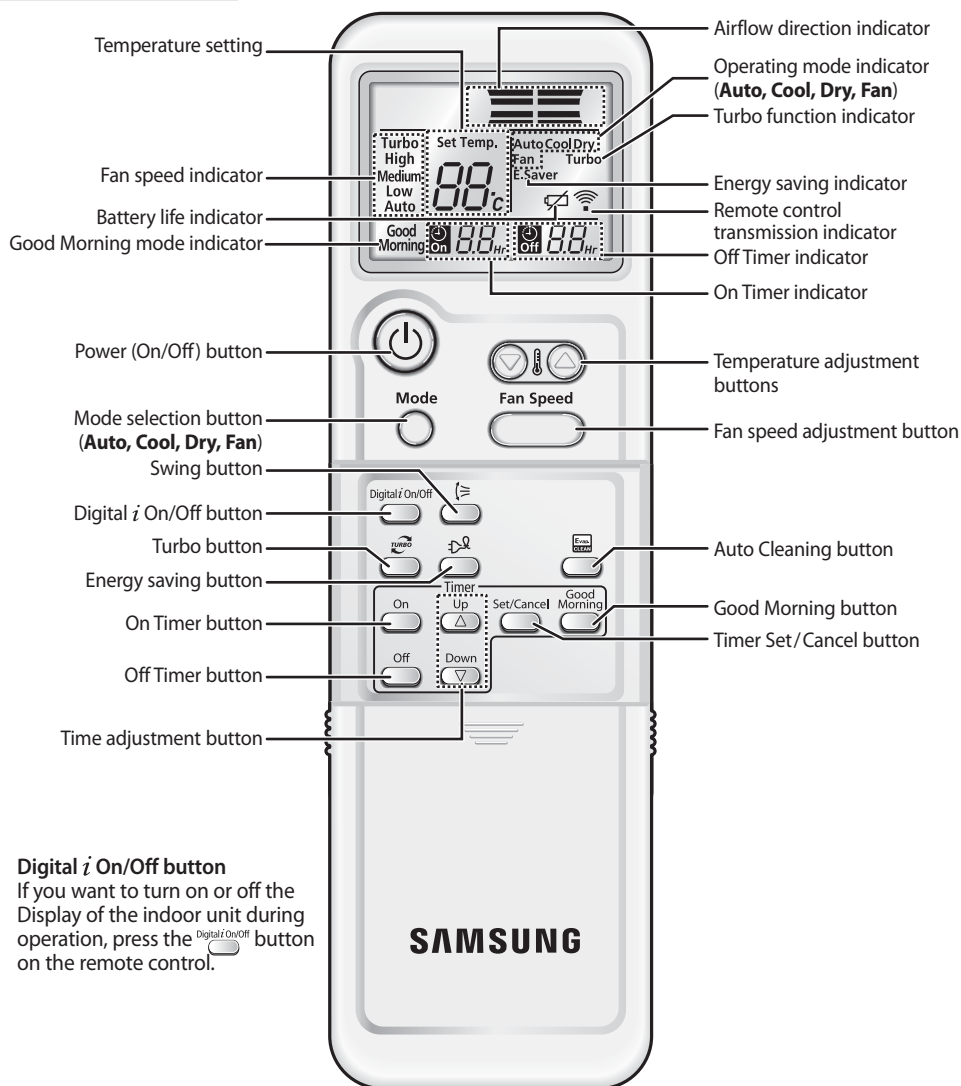

**Note** **Digital i On/Off button**  
If you want to turn on or off the Display of the indoor unit during operation, press the Digital i On/Off button on the remote control.

## Inserting the Remote Control Batteries

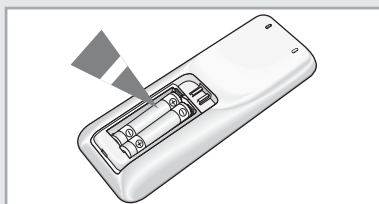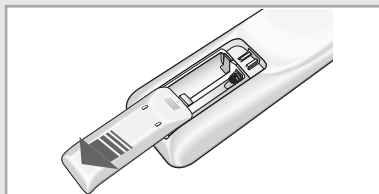

**You must insert or replace the remote control batteries when:**

- ◆ You purchase the air conditioner
- ◆ The remote control does not work correctly

**Note**

- ◆ Use two AAA, LR03 1.5V batteries.
- ◆ Do not use old and new batteries or different kinds of batteries together.
- ◆ Insert two batteries correctly as indicated by the + and - symbols.

- 1 Remove the battery cover in the rear of the remote control by pushing it with your thumb.
- 2 Insert two batteries, respecting the polarities as indicated by the + and - symbols.
- 3 Close the cover by sliding it back in place.

# Getting Started




*The User's Manual provides you with valuable information about your air conditioner. In order to take full advantage of the air conditioner's features, please read this manual carefully before using.*

*You have already seen the basic description of the unit on pages from 8 to 10. Starting with the next page, you will find a series of step-by-step procedures for each function available.*

*The illustrations in the step-by-step procedures use three different symbols:*

|                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |
| <b>PRESS</b>                                                                      | <b>PUSH</b>                                                                       | <b>HOLD DOWN</b>                                                                  |

## Selecting Auto Mode

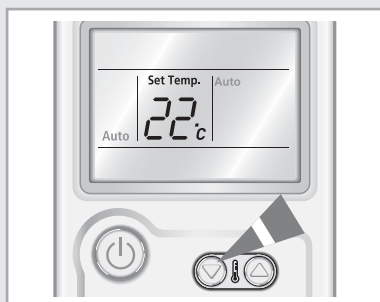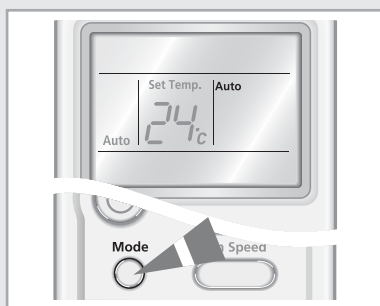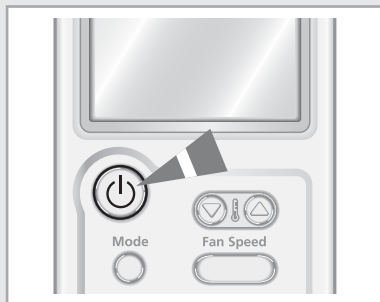

**You can select Auto mode if you want to cool your room automatically. You can adjust the temperature in this mode.**

- 1 Press the  (On/Off) button.

**Result:**

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
- ◆ The indoor unit beeps.

- 2 Press the  button on the remote control until **Auto** is displayed.

**Result:**

- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in Auto mode.
- ◆ Auto mode cools the room depending on the set temperature.
- ◆ The air conditioner changes from Cool mode automatically, depending on the current temperature.

**Note**

You can change modes at any time.

- 3 Press the  button to adjust the temperature until the required temperature is displayed.  
You can set the temperature between 16°C and 30°C.

**Result:**

- ◆ Each time you press the  button:
  - The temperature adjusts by 1°C
  - The indoor unit beeps
- ◆ The fan speed adjusts automatically.

## Selecting Cool Mode

*You can select Cool mode if you want to cool your room.*

*You can adjust the temperature and the fan speed when cooling.*

- 1 Press the  (On/Off) button.

**Result:**

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
- ◆ The indoor unit beeps.

- 2 Press the  button on the remote control until **Cool** is displayed.

**Result:**

- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in Cool mode.

**Note** You can change modes at any time.

- 3 Press the  button to adjust the temperature until the required temperature is displayed.  
You can set the temperature between 16°C and 30°C.

**Result:**




- ◆ Each time you press the  button:
  - The temperature adjusts by 1°C
  - The indoor unit beeps
- ◆ If the room temperature is higher than the selected temperature, the air conditioner starts cooling.
- ◆ If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan continues to operate.

- 4 Press the  button to select the fan speed until the required setting is displayed.

**Auto → Low → Medium → High → Turbo**


**Result:** Each time you press the  button, the indoor unit beeps.

- 5 To control the airflow direction, refer to page 20.

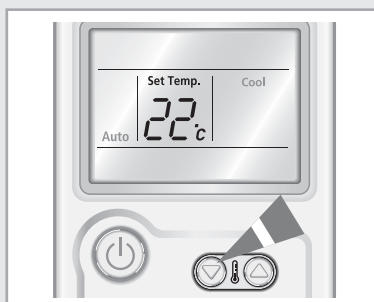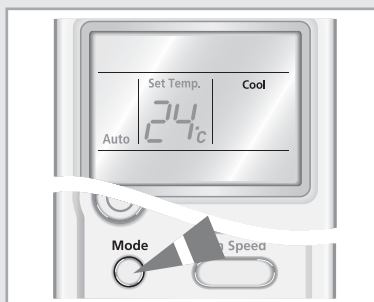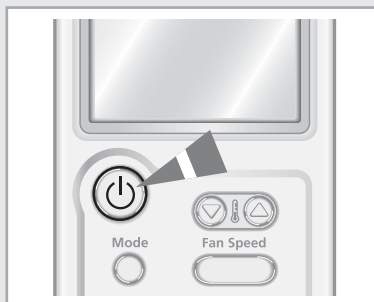

## Selecting Dry Mode

**Select Dry mode if you want to dehumidify your room.  
You can adjust the temperature in this mode.**

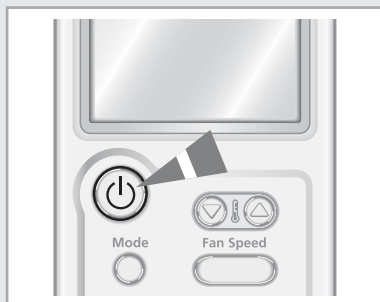

- 1 Press the  (On/Off) button.

**Result:**

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
- ◆ The indoor unit beeps.




- 2 Press the  button on the remote control until **Dry** is displayed.

**Result:**

- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Dry mode.

**Note**

You can change modes at any time.

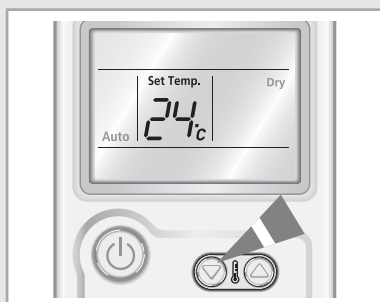

- 3 Press the  button to adjust the temperature until the required temperature is displayed.

You can set the temperature between 18°C and 30°C.

**Result:**

- ◆ Each time you press the  button:
  - The temperature adjusts by 1°C
  - The indoor unit beeps
- ◆ The air conditioner starts dehumidifying and the fan speed adjusts automatically.

- 4 To control the airflow direction, refer to page 20.

## Selecting Fan Mode

**Select Fan mode if you want to ventilate your room. It helps to refresh the air in your room. You can adjust the fan speed in this mode.**

- 1 Press the  (On/Off) button.  
**Result:**
  - ◆ The operation indicator on the indoor unit lights up.
  - ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
  - ◆ The indoor unit beeps.

- 2 Press the  button on the remote control until **Fan** is displayed.  
**Result:**
  - ◆ The indoor unit beeps each time you press the  button.
  - ◆ The air conditioner runs in Fan mode.
  - ◆ The temperature is set automatically.




**Note** You can change modes at any time.

- 3 Press the  button to adjust the temperature until the required setting is displayed.

**Low → Medium → High**


**Result:** Each time you press the  button, the indoor unit beeps.

- 4 To control the airflow direction, refer to page 20.

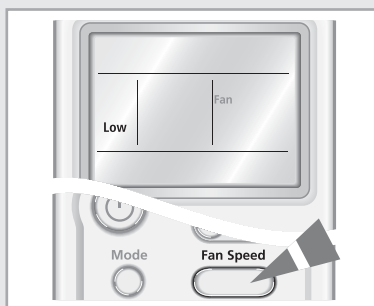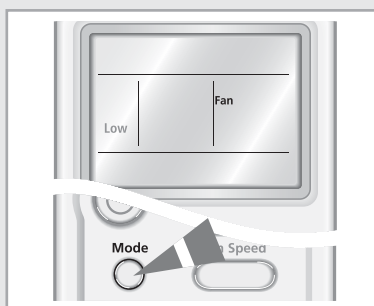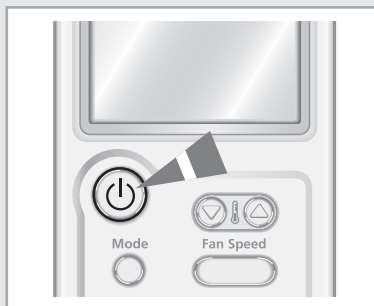

## Selecting the Turbo Function


*You can select the Turbo Function if you want to cool your room as quickly as possible. The Turbo function operates for 30 minutes with the maximum settings before returning automatically to the mode and temperature previously selected.*

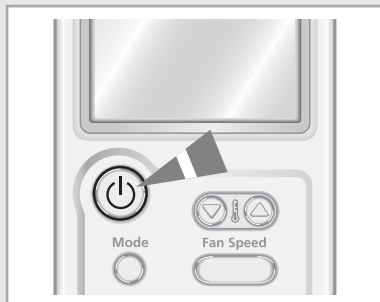

- 1 Press the  (On/Off) button.

**Result:**

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
- ◆ The indoor unit beeps.

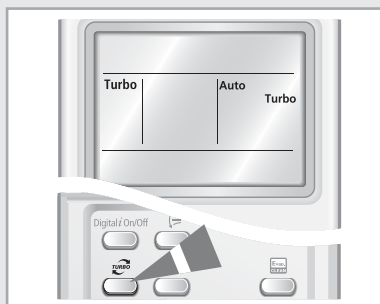

- 2 Press the  button.

**Result:**

- ◆ The temperature and fan settings are adjusted automatically.
- ◆ The air conditioner cools the room as quickly as possible.
- ◆ After 30 minutes, the air conditioner is reset automatically to the previous setting.
- ◆ You can select the Turbo function in Auto, Cool mode. If you select this function in Dry or Fan mode, the mode changes to Auto mode.

- 3 Press the  button again to stop the Turbo Function before the end of the 30-minute period.

**Result:** The air conditioner is reset automatically to the previous setting.

- 4 To control the airflow direction, refer to page 20.

## Selecting the Energy Saving Function

**You can select the Energy Saving Function to save energy when cooling.  
The temperature range decreases in order to perform this function.**

- 1 Press the  (On/Off) button.

**Result:**

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
- ◆ The indoor unit beeps.

- 2 Press the  button.

**Result:**

- ◆ The indoor unit beeps.
- ◆ The air conditioner runs in the Energy saving function.
- ◆ The outer airflow blade moves up and down.
- ◆ The airflow direction indicator is displayed automatically.
- ◆ To stop the Energy saving function, press the  again.

**Note** You can select the Energy saving function only in Cool mode.

- 3 Press the  button to adjust the temperature until the required temperature is displayed.  
You can set the temperature between 26°C and 30°C.




**Note** If you want to adjust temperature under 26°C, cancel the Energy saving function before adjusting the temperature.

- 4 Press the  to select the fan speed until the required setting is displayed.

**Auto → Low → Medium → High → Turbo**


**Result:** Each time you press the  button, the indoor unit beeps.

- 5 To control the airflow direction, refer to page 20.

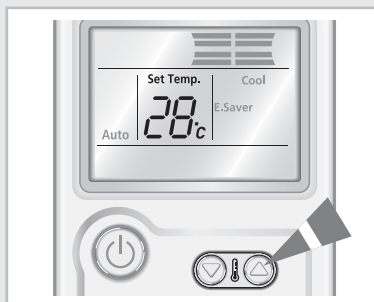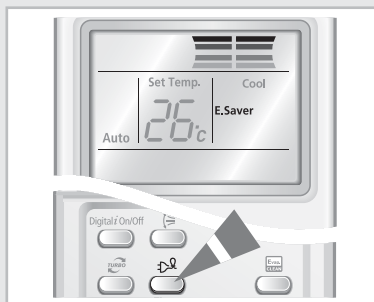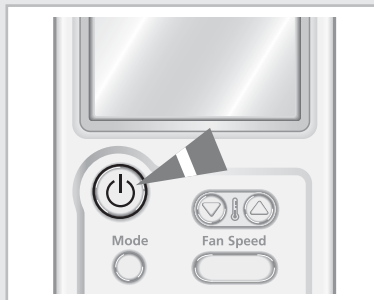

## Selecting Good Morning Mode


**Good Morning mode helps users to fall asleep well after going to bed whether being too hot to sleep or being awakened by coldness. The Good Morning mode can be selected only when the air conditioner is switched on or off in cool mode.**

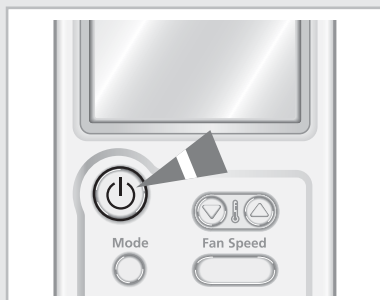

- 1 Press the (On/Off) button.

**Result:**

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
- ◆ The indoor unit beeps.

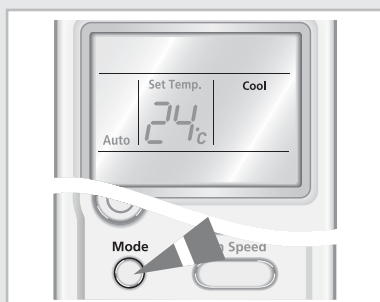

- 2 Press the button to select **cool** mode.

**Result:**

- ◆ The indoor unit beeps each time you press the button.
- ◆ The air conditioner runs in cool mode.



- 3 Press the button.

**Result:**

- ◆ The timer indicator is displayed.
- ◆ The Off timer is blinking on the remote control.



- 4 To set the Good Morning Off timer, press the buttons once or more times until the required Off time is displayed.

**Result:**

- ◆ The Good Morning mode will be automatically stopped in 8 hours if the operation time is not set.
- ◆ You can set the Off timer by pressing the buttons to turn off the Good Morning mode automatically at the appointed time within a range of 30 minutes to 12 hours.
- ◆ Each time the buttons are pressed, the time is increased by 30 minutes or 1 hour. Good Morning mode will be stopped at the appointed off time.

- 5 Press the button.

**Result:** The remaining time is displayed.

**Note** In the case of selecting Good Morning mode or adjusting the extra time for Good Morning mode, you should press the button within 10 seconds. If you do not press the button within 10 seconds, Good Morning mode will be canceled automatically.

- 6 Press the button to adjust the temperature until the desired temperature is displayed. You can set the temperature between 16°C and 30°C.

**Result:** Each time you press the button;

- The temperature adjusts by 1°C
- The indoor unit beeps

## In cool mode

**Good Morning mode keeps the skin temperature at the best during the 3 stages such as, Falling Asleep Stage → Sound Sleep Stage → Wake Up Stage in order.**

① **Falling Asleep Stage :**


This stage supports the environment to quickly cool down. Together with comfortable intermittent air, you will be able to fall asleep quickly.

② **Sound Sleep Stage :**

This stage helps users to take deep sleep and keep the healthy skin by controlling wavy temperature control and insensible air stream.

③ **Wake Up Stage :**


This stage supports comfortable intermittent air to the room to raise human body temperature for refreshing wake up.

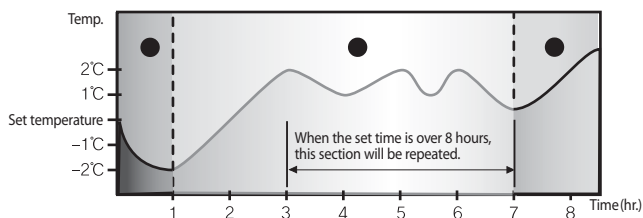

- ▶ The recommended temperature is set between 25°C and 27°C, and 26°C is the most ideal temperature for comfortable sleep.
- ▶ Airflow blades and fan speed are controlled automatically as the above 3 stages in Good Morning mode.
- ▶ Set Off timer in Good Morning mode over 5 hours. You feel disturbed sleep if the Good Morning is set too short or long because the basic off timer is set for 8 hours.
- ▶ If the Good Morning mode is set less than 4 hours, the operation will be stopped after the set time. If the Good Morning mode is set over 5 hours, it will run as Wake Up stage for the last one hour before stop.

## Adjusting the Airflow Direction

Adjust the airflow direction to circulate the air according to various needs. By adjusting the airflow direction, the efficiency of the air conditioner can be increased.

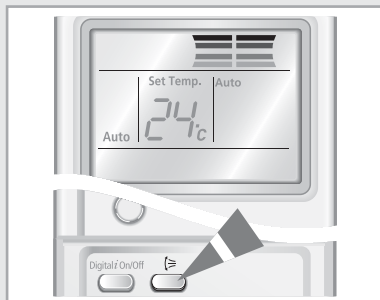


### Adjusting the Airflow Direction Vertically

**You can adjust the airflow direction vertically. The outer airflow blade moves up and down to increase the efficiency of the cooling operation.**

- 1 Press the  button until the required direction is set.  
**Result:** The outer blade is adjusted vertically.
- 2 Press the  button again to move the blade up and down automatically during operation.
- 3 Press the  button again to stop the blade moving up and down.

| <i>Note</i> <b>If you turn the air conditioner... Then the blade...</b> |                              |
|-------------------------------------------------------------------------|------------------------------|
| Off                                                                     | is closed completely.        |
| On                                                                      | set to the default position. |

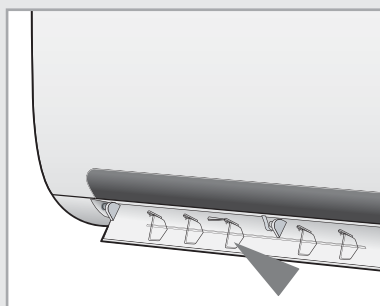

### Adjusting the Airflow Direction Horizontally

**You can adjust airflow direction horizontally manually. The inner blades with small fins move the air in the desired direction.**

- 1 Adjust the inner blades by moving them left or right.
  - ◆ Make sure do not touch the inner blades during operation. It may cause injury on your fingers.

## Selecting the Auto Cleaning Function

**You can select the Auto Cleaning Function if you want to sterilize the air conditioner or remove mold. You can set this function even when the air conditioner is turned off.**

- 1 Press the  (On/Off) button.  
**Result:**
  - ◆ The operation indicator on the indoor unit lights up.
  - ◆ The air conditioner starts up in Cool mode with Turbo fan speed.
  - ◆ The indoor unit beeps.


- 2 Press the  button.  
**Result:**
  - ◆ The  indicator on the indoor unit lights up and the Auto Cleaning function is set.
  - ◆ When you turn the air conditioner off, it operates the Auto Cleaning function for 30 minutes. After 30 minutes, the air conditioner turns off.
  - ◆ If you press the  button when the air conditioner is turned off, the air conditioner operates the Auto Cleaning Function for 30 minutes.

### When the air conditioner is turned


|     | Mode            | Operating time |
|-----|-----------------|----------------|
| On  | Auto, Cool, Dry | 30 minutes     |
|     | Fan             | 15 minutes     |
| Off |                 | 30 minutes     |

**Note** The Auto Cleaning indicator is displayed only on the indoor unit.


- 3 Press the  button again to stop the Auto cleaning function before the end of the 30-minute period.

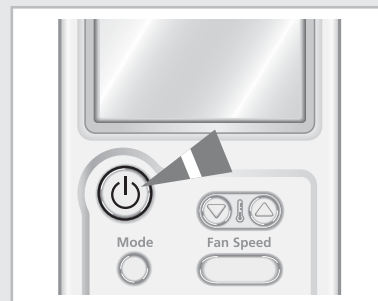

Remote Control

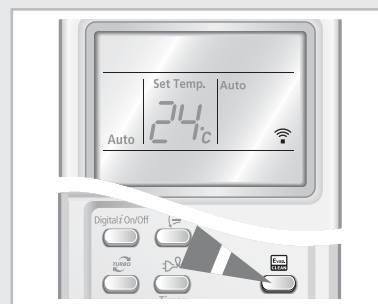

Control Panel

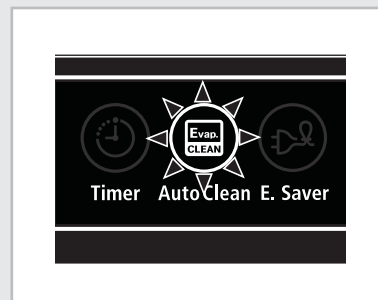

## Setting the On Timer

**You can set the On Timer to turn on the air conditioner automatically at the appointed time within a range of 30 minutes to 24 hours.**



- 1 Press the button .



- 2 Press the or buttons until the desired time is displayed to set the On Timer. You can set the time between 0.5 hour and 24 hours.



- 3 Press the button to complete the setting.

**Result:**

- ◆ The remaining time is displayed.
- ◆ The timer indicator stops blinking.
- ◆ The selected mode and the temperature on the display disappear after 10 seconds.
- ◆ The air conditioner turns on automatically at the appointed time and the On Timer setting disappears.

- 4 Press the button until the desired mode is displayed at the top of the remote control to select the mode in advance.


**Result:**

The air conditioner operates in the selected mode when it is turned on.

**Note**

- ◆ The most recently used function is set between On and Off Timer to turn on/off the air conditioner and Good Morning mode.

## To Cancel the On Timer

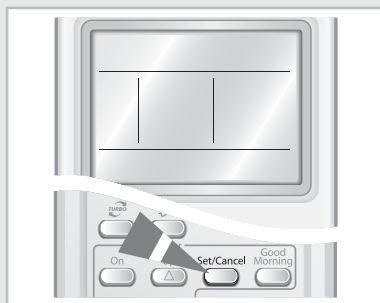

- 1 Press the button to cancel the On Timer.

**Note**

If you press the button, both the On Timer and the Off Timer are canceled.

## Setting the Off Timer

**You can set the Off Timer to turn off the air conditioner automatically at the appointed time within a range of 30 minutes to 24 hours.**

- 1 Press the  button.
  - 2 Press the  or  buttons until the desired time is displayed to set the Off Timer. You can set the time between 0.5 hour and 24 hours.
  - 3 Press the  button to complete the setting.
- Result:**
- ◆ The remaining time is displayed.
  - ◆ The timer indicator stops blinking.
  - ◆ The air conditioner turns off automatically at the appointed time and the Off Timer setting disappears.



**Example** If you would like to turn the air conditioner on after 2 hours and to operate it for 2 hours during non-operation:

1. Press the  button.
2. Press the  or  buttons until '2.0 Hr' is displayed.
3. Press the  button.
4. Press the  button.
5. Press the  or  buttons until '4.0 Hr' is displayed.
6. Press the  button.

**Note** If you would like to turn on the air conditioner and then to turn off it automatically at the appointed time by using On/Off Timer during operation, you should set the On Timer longer than the Off Timer.

**Caution** Make sure that the air conditioner will not continue to run after On Timer setting is confirmed.


- Note**
- ◆ You can check or change the mode and/or the temperature by pressing the  button or the  button after setting the Off Timer.
  - ◆ The most recently used function is set between On and Off Timer to turn on/off the air conditioner and Good Morning mode.
  - ◆ If you would like to turn off the air conditioner and then to turn on it again automatically at the appointed time by using On/Off Timer during non-operation, you should set the Off Timer longer than the On Timer.

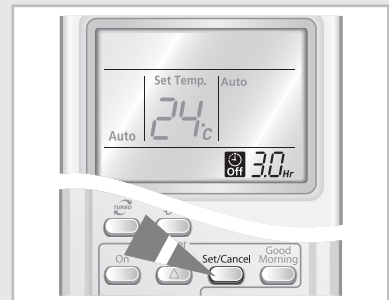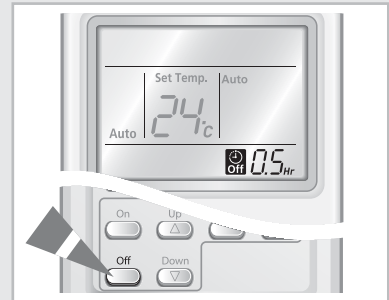


## To Cancel the Off Timer

- 1 Press the  button to cancel the Off Timer.

**Note** If you press the  button, both the On Timer and the Off Timer are canceled.

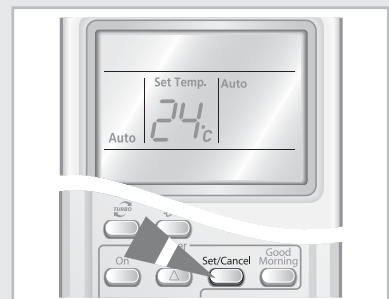

## Operating Your Air Conditioner Without the Remote Control

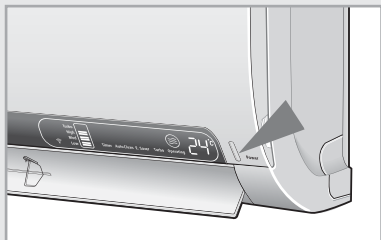


*You can operate your air conditioner directly without the remote control.*

- 1 To turn the air conditioner on, press the ON/OFF switch on the right side of the indoor unit.

**Result:**

- ◆ The Operation indicator on the indoor unit lights up.
- ◆ The indoor unit beeps.
- ◆ The air conditioner starts up in the appropriate mode for the room temperature.

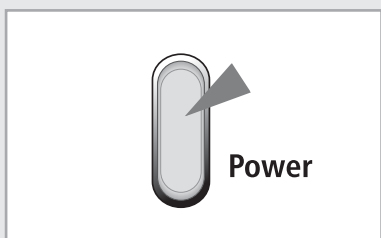

- 2 To turn the air conditioner off, press the On/Off button again.

**Note** Even if you turned the air conditioner on with the On/Off button, you can control it with the remote control.




## Cleaning Air Filter on Your Air Conditioner

**For the best use of your air conditioner, you must clean it every 2 weeks regularly to remove the dust that accumulates on the air filter.**

**CAUTION** Before cleaning your air conditioner, ensure that you have switched off the breaker used for the unit.

- 1 Open the front panel by pulling tabs on the lower right and left sides of the indoor unit.
- 2 Detach the front panel by pulling it forwards.
- 3 Hold the edge of the air filter under the front panel and pull to release.
- 4 Remove all dust on the air filter with a vacuum cleaner or brush.
- 5 When you finish, insert the top of the filter into the slot and fix it to 5 tabs or 3 tabs of the panel.
- 6 Clean the front panel with a damp cloth and mild detergent (do NOT use benzene, solvents or other chemicals).
- 7 Reassemble the air filter and the front panel.


**Note** If you have not used the air conditioner for a while, select the Fan mode for 3 to 4 hours to dry the inside of the air conditioner.

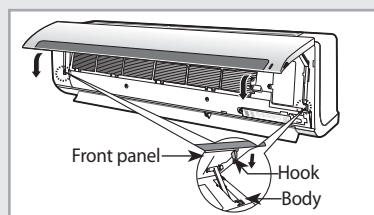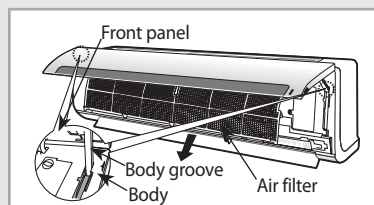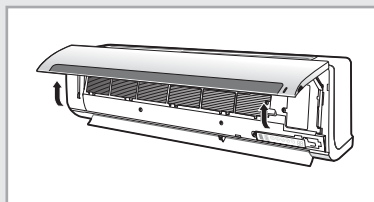

## Cleaning Deodorizing and Bio filter (Option)

**There are Deodorizing and Bio filters inside your air conditioner. They remove odours and dust in your room. You should clean the filters every 3 months.**

- 1 Open the upper front panel by pulling the lower right and left tabs of the panel.
- 2 Pull out the deodorizing and Bio filter.
- 3 Wash the filters with clean water, then dry them in the shade.
- 4 Insert the filters in their place.
- 5 Close the front panel.

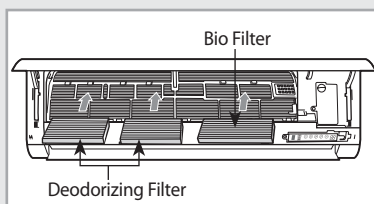

## Temperature and Humidity Ranges

*If you check the following tables, you can use your air conditioner more efficiently.*

### **If the air conditioner is used at... Then...**

|                      |                                                                                                                                      |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Heating capacity     | The air conditioner may stop operating for the reason of protection.                                                                 |
| Low temperatures     | Water may leak and some malfunction may occur if the heat exchanger freezes.                                                         |
| Protection mechanism | Water may condense and drip from the surface of the indoor unit if you don't use the air conditioner for an extended period of time. |

| <b>Operation</b> | <b>Outdoor Temperature</b> | <b>Indoor Temperature</b> | <b>Indoor Humidity</b> |
|------------------|----------------------------|---------------------------|------------------------|
| Cooling          | 21°C to 43°C approx.       | 16°C to 32°C approx.      | 80% or less            |
| Dehumidifying    | 18°C to 43°C approx.       | 16°C to 32°C approx.      | -                      |

※ *If you use the air conditioner in temperatures over 32°C (indoor temperature), the cooling capacity may drop.*

## Operating Recommendations

*When you use your air conditioner, it is recommended that you read the following:*

| <b>Topic</b>         | <b>Recommendation</b>                                                                                                                                                              |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power failure        | If a power failure occurs when the air conditioner is operating, the air conditioner will turn off. When the power returns, the air conditioner will start up again automatically. |
| Protection mechanism | When the air conditioner is started immediately after being plugged in or stopped, the normal operation starts up after 3 minutes for the reason of protection.                    |

## Solving Common Problems

**Before contacting the after-sales service, perform the following simple checks.  
They may save you the time and expense of an unnecessary call.**

| <b>Problem</b>                                           | <b>Explanation/Solution</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The air conditioner does not operate at all.             | <ul style="list-style-type: none"> <li>◆ Check if power is on and operate the air conditioner again.</li> <li>◆ Check if the circuit breaker is switched off.</li> <li>◆ Check if Off Timer is set.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| The temperature is not adjusted.                         | <ul style="list-style-type: none"> <li>◆ Check if you selected the Fan mode.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| The air conditioner does not operate in the HEAT mode.   | <ul style="list-style-type: none"> <li>◆ Check if the air conditioner is cooling only model.</li> <li>◆ Check if the remote control is for cooling only model.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| The cool air does not come out from the air conditioner. | <ul style="list-style-type: none"> <li>◆ Check if set temperature higher than current temperature.</li> <li>◆ Check if you selected the Fan mode. Select the Cool, Auto or Dry mode.</li> <li>◆ Check if the air filter is blocked by dirt. Clean the air filter regularly.</li> <li>◆ Check if there is cover on the outdoor unit or any obstacle. Remove the cover or obstacle.</li> <li>◆ Check if you installed the air conditioner under direct sunlight.</li> <li>◆ The window or door may be opened.</li> <li>◆ Check if you turn on the air conditioner just now. It takes about 3 minutes to cool the room.</li> <li>◆ Check if the drain pipe is too long.</li> </ul> |
| The fan speed is not adjusted.                           | <ul style="list-style-type: none"> <li>◆ In Auto or Dry mode, the fan speed is selected automatically.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| The remote control does not operate.                     | <ul style="list-style-type: none"> <li>◆ Check if the battery is discharged. Replace the battery.</li> <li>◆ Check if the remote control sensor is blocked.</li> <li>◆ Check if the air conditioner is placed near strong light.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| The Timer is not set.                                    | <ul style="list-style-type: none"> <li>◆ Check if you pressed the  button after selecting time.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Odor is permeated in the room during operation.          | <ul style="list-style-type: none"> <li>◆ Check if you use the air conditioner in smoky area or there is a smell. Ventilate the room or select the Fan mode for 1~2 hours.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| The indoor unit indicator flashes.                       | <ul style="list-style-type: none"> <li>◆ Press the  button to turn on the air conditioner again. Switch the circuit breaker off and switch on it again.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Strange sound is heard from the air conditioner.         | <ul style="list-style-type: none"> <li>◆ The sound is heard when the refrigerant gas flow is changed depending on the use of the air conditioner.</li> <li>◆ When you press the  button, noise may be heard that the air conditioner sense the airflow blade.</li> </ul>                                                                                                                                                                                                                                                                                                                     |
| Water drops from the outdoor unit connection part.       | <ul style="list-style-type: none"> <li>◆ Water may form due to the difference of the temperature.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## Technical Specifications

| MODEL       |          |         | AS18MWBUMG |   |            |   | AS24MWBUMG |   |            |   |
|-------------|----------|---------|------------|---|------------|---|------------|---|------------|---|
| STANDARD    |          |         | ISO        |   | SASO       |   | ISO        |   | SASO       |   |
| CAPACITY    | COOL     |         | 18000BTU/h |   | 3750kcal/h |   | 24000BTU/h |   | 5000kcal/h |   |
|             | HEAT     |         | -          |   | -          |   | -          |   | -          |   |
| SOURCE      |          |         | 220V~,60Hz |   |            |   |            |   |            |   |
| CURRENT     | COOL     |         | 9.0A       |   | 10.5A      |   | 12.0A      |   | 13.5A      |   |
|             | HEAT     |         | -          |   | -          |   | -          |   | -          |   |
| INPUT POWER | COOL     |         | 1900W      |   | 2250W      |   | 2600W      |   | 2900W      |   |
|             | HEAT     |         | -          |   | -          |   | -          |   | -          |   |
| REFRIGERANT | KIND     |         | R22        |   |            |   |            |   |            |   |
|             | QUANTITY |         | 1200g      |   |            |   | 1300g      |   |            |   |
| EER         | COOL     |         | 9.4        |   | 6.6        |   | 9.2        |   | 6.8        |   |
|             | HEAT     |         | -          |   | -          |   | -          |   | -          |   |
| TEMPERATURE | INDOOR   | DB(C/H) | 27℃        | - | 29℃        | - | 27℃        | - | 29℃        | - |
|             |          | WB(C/H) | 19℃        | - | 19℃        | - | 19℃        | - | 19℃        | - |
|             | OUTDOOR  | DB(C/H) | 35℃        | - | 46℃        | - | 35℃        | - | 46℃        | - |
|             |          | WB(C/H) | 24℃        | - | 24℃        | - | 24℃        | - | 24℃        | - |
| WEIGHT      | INDOOR   | NET     | 13Kg       |   |            |   | 13Kg       |   |            |   |
|             |          | CROSS   | 16Kg       |   |            |   | 16Kg       |   |            |   |
|             | OUTDOOR  | NET     | 39Kg       |   |            |   | 56Kg       |   |            |   |
|             |          | CROSS   | 43Kg       |   |            |   | 58Kg       |   |            |   |

## MEMO

[illegible]



### **Contact SAMSUNG WORLD WIDE**

If you have any comments or questions regarding a Samsung product, contact the SAMSUNG customer care center.

| <b>Country</b> | <b>Customer Care Center</b>  | <b>Web Site</b>                                              |
|----------------|-----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| SOUTH AFRICA   | 0860 7267864 (SAMSUNG)                                                                                          | <a href="http://www.samsung.com/za">www.samsung.com/za</a>   |
| U.A.E          | 800SAMSUNG (7267864)                                                                                            | <a href="http://www.samsung.com/mea">www.samsung.com/mea</a> |



# USER'S MANUAL

**AS09M\*B Series**

**AS12M\*B Series**

**AS18M\*B Series**

**AS24M\*B Series**

## **Split - type Air Conditioner** **(Cooling )**

